


RHEOMETER REPORT

ABC

TEMP(C)	170.0
TIME(MIN)	5.0
TORQUE UNIT	dN*m

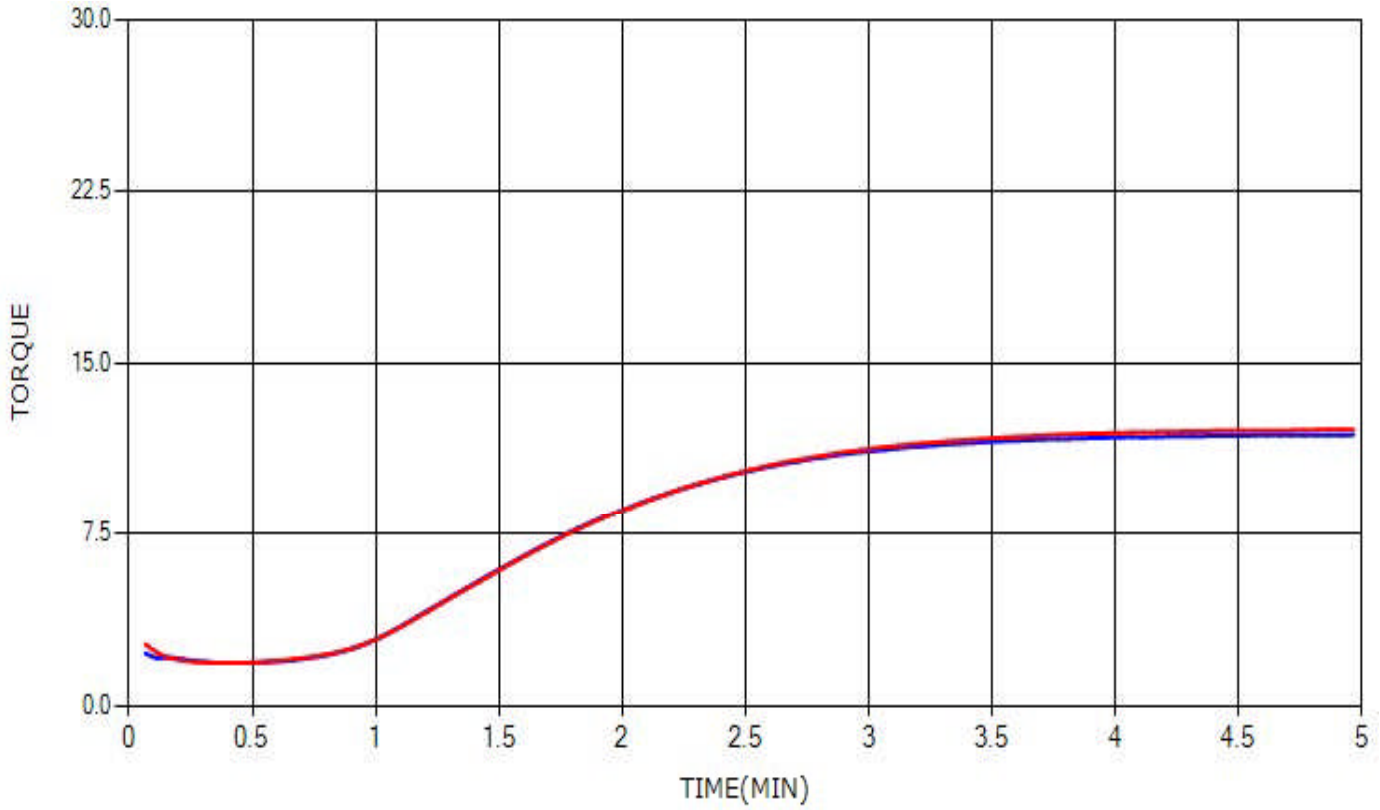


ID1	ID2	ID3	QC	ML	MH	ts1	ts2	tc10	tc50	tc90	Date
フィルムなし				1.88	11.88	0.98	1.17	0.98	1.65	2.78	2020/08/30 15:55:13
フィルムあり				1.88	12.12	0.98	1.17	1.00	1.68	2.87	2020/08/30 16:04:30

Lower Limit											
Upper Limit											
Average				1.88	12.00	0.98	1.17	0.99	1.67	2.82	
Standard deviation					0.17			0.01	0.02	0.06	
Coefficient of variation(%)					1.44			1.19	1.41	2.09	

MOONEY VISCOMETER REPORT

ABC

TEMP(C)	100.0
PREHEAT TIME(MIN)	1.0
TORQUE UNIT	Mooney

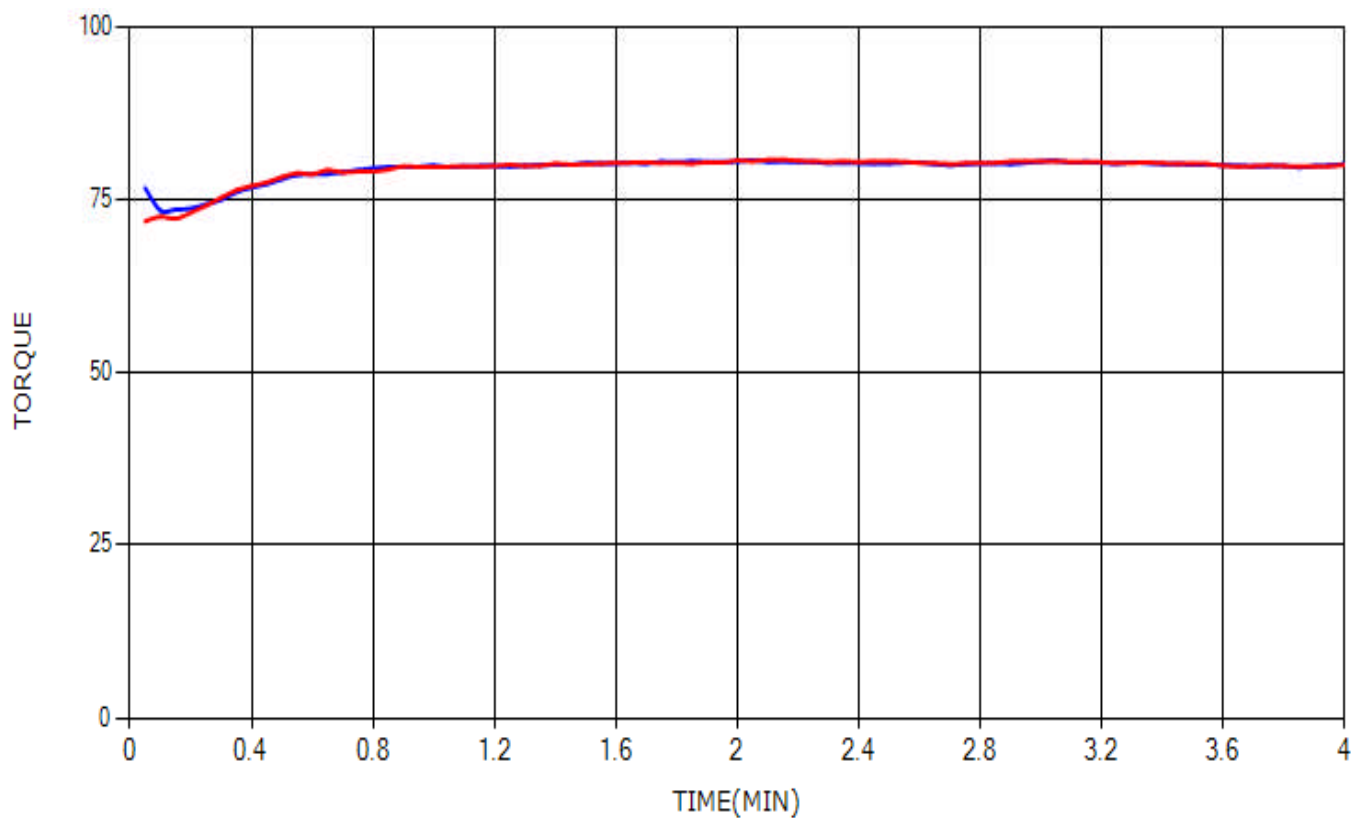

ID1	ID2	ID3	QC	min	max	ML(1+4)	Date
フィルムなし				73.3	93.9	80.3	2020/08/30 16:32:04
フィルムあり				71.9	90.9	80.1	2020/08/30 16:41:10

Lower Limit			
Upper Limit			
Average	72.60	92.40	80.20
Standard deviation	0.99	2.12	0.14
Coefficient of variation(%)	1.36	2.30	0.18